 




# ZTE


## MF29 Router configuration for Windows

- Plug in the router and insert the SIM card to start
- Open your browser and enter the IP **192.168.0.1**
- Click **Enter**



Enter

- Username: **Admin**
- Password: **admin**

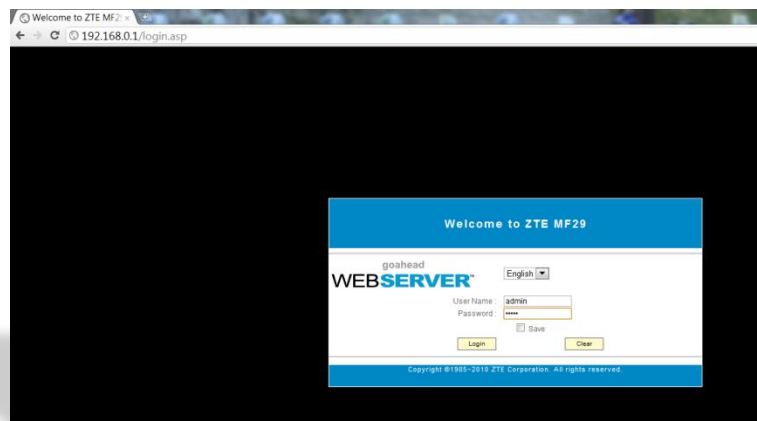



Enter the pin code: **0000**

Click **Apply**

The screenshot shows the ZTE 3G Wireless Router WebGUI Configuration interface. The left sidebar contains a menu with options: Router Status, Quick Setup, WAN Connection, 3G Settings, Router, Wi-Fi Settings, Firewall, SMS, Advanced, and Logout. The main content area is titled 'PIN' and includes a 'Verify Pin' section with a text input field containing '0000'. Below this is a 'Pin Save' section with a 'save' button and a note: 'There are 3 times for you to input PIN!'.

Network Selection window

Choose your preferred network

Click **Apply**

The screenshot shows the ZTE 3G Wireless Router WebGUI Configuration interface at the 'Network Select' screen. The left sidebar is the same as in the previous screenshot. The main content area is titled '3G Settings-->Network Select' and has tabs for 'Wireless Info', 'Network Select', and 'APN Settings'. Under 'Network Select', there is a 'Band Selection Mode' section with three radio button options: 'Automatic' (selected), 'WCDMA Only', and 'GSM Only'. An 'Apply' button is located at the bottom right of the main content area.



Click on APN settings

- Choose **Add**
- **Profile Name: Alfa 3G**
- **APN Settings: Manual**
- **APN: Internet.mic1.com.lb**
- **PDP Type: IP**
- **PDP Settings: Auto PDP**
- **DNS: Auto DNS**
- **Authentication: PAP**
- **Username: mic1**
- **Password: mic1**
- Click **Save**
- Click **Set Default**

The screenshot shows the ZTE 3G Wireless Router WebGUI Configuration page. The page title is "ZTE 3G Wireless Router WebGUI Configuration". The left sidebar contains navigation links: Router Status, Quick Setup, WAN Connection, 3G Settings, Router, Wi-Fi Settings, Firewall, SMS, Advanced, and Logout. The main content area is titled "3G Settings -> APN Settings". It has three tabs: "Wireless Info", "Network Select", and "APN Settings". The "APN Settings" tab is active. The form contains the following fields:

Profile Selection	Add new
Profile Name	Alfa 3G
APN Settings	<input checked="" type="radio"/> Auto APN <input type="radio"/> Manual APN
APN	Internet.mic1.com.lb
Dial No.	+998
PDP Type	<input checked="" type="radio"/> ip <input type="radio"/> ppp
PDP Settings	<input checked="" type="radio"/> Auto PDP <input type="radio"/> Manual PDP
DNS	<input checked="" type="radio"/> Auto DNS <input type="radio"/> Manual DNS
Authentication	<input type="radio"/> CHAP <input checked="" type="radio"/> PAP
User Name	mic1
Password	****

At the bottom right of the form, there are buttons for "Save", "Set Default", "Add", and "Delete".



Click **Quick step** form the left menu  
Click **Next**

The screenshot shows the ZTE 3G Wireless Router WebGUI Configuration interface. The left sidebar contains a menu with 'Quick Setup' highlighted. The main content area is titled 'Quick Setup' and contains instructions: 'The wizard will show you how to set up your router in the safe way. Click "Next" to continue, click "Back" and "Next" to navigate, and click "Apply" to save the settings.' Below this, there are 'Notes' and a 'Next' button circled in red.

**Profile name** should be created by now  
Click **Next**

The screenshot shows the ZTE 3G Wireless Router WebGUI Configuration interface at the 'Profile Configuration' step. The left sidebar menu has 'Quick Setup' selected. The main content area is titled 'Quick Setup -> Profile Configuration' and includes instructions: 'Profile Name: The default profile that you used currently.', 'APN: If a fixed APN (Access Point Name) is given by your ISP, select "Manual APN"; otherwise, select "Auto APN", the router automatically obtains it.', and 'Dial No. This parameter is provided by your ISP. Dial No. is used for data service connections.' The form fields are: 'Profile Name' (ALFA\_3G), 'APN Settings' (Auto APN selected), 'APN' (lincenet.micl.com.lb), and 'Dial Settings' (Dial No. 199#). A 'Next' button is circled in red.

## Authentication window

Click **Next**



Quick Setup -> Authentication

• Authentication  
The authentication mode is provided by your Internet Service Provider(ISP).  
Password Authentication Protocol(PAP): It provides a simple method without encryption for the peer to establish its identity using a 2-way handshake.  
Challenge-Handshake Authentication Protocol(CHAP): It is used to periodically verify the identity of the peer User Name and Password are provided by your ISP and used to obtain authentication from the ISP when the connection is established.

Authentication

Authentication  CHAP  PAP

User Name

Password

Back **Next**

## Choose a name for the wireless network

Click **Next**

Quick Setup -> SSID Configuration

•Name SSID(Service Set Identifier) Enter a character string up to 32 characters as the name for your wireless local area network(WLAN).  
•SSID Broadcast  
Enabled: The router broadcasts the SSID and other devices can detect and connect to it.  
Disabled: The router disables broadcasting and hides the name of your network.

SSID

Name(SSID)


SSID Broadcast

SSID Broadcast

Back **Next**



- Choose the required encryption
- Click **Next**

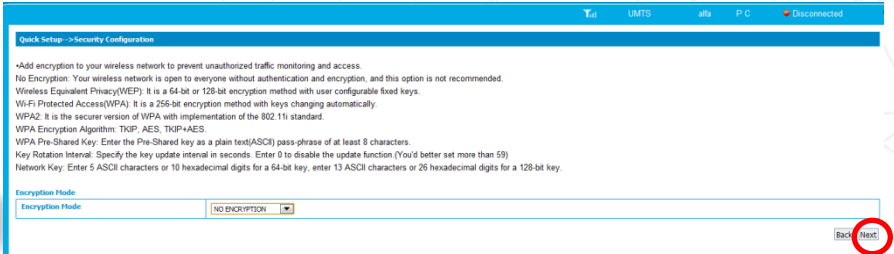

- Verify the settings
- Click **Apply**
- The **Disconnected** description should become **Connected** and connection to the internet should be established

